


WINCHRITE BATTERY CHANGE OUT PROCEDURE:

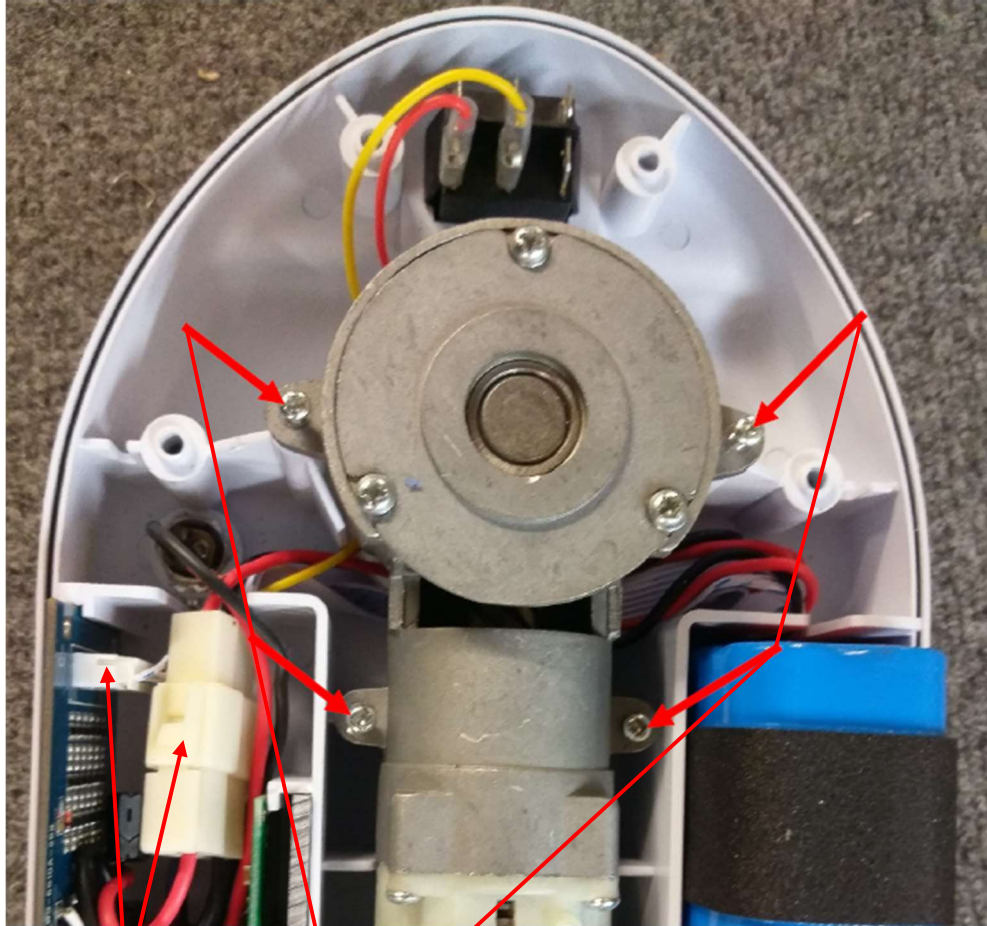

1-Unplug battery-two plugs:

2-Loosen four screws holding gearbox in place-lift upward slightly to allow batter wires to pass under.

3-Reprocess in reverse-thread battery wires under gearbox and install plugs.

NOTE: Battery is discharged for shipping. Charge battery till green LED indicator is on. This may take an extended initial period of charge time.

RECOMMENDED: Short cycle procedure is recommended when changing battery- URL link for details:

<https://winchrite.com/wp-content/uploads/2024/06/Brushless-short-cycle-solution.pdf>